

ENGSCI 355 Labs

Thomas Adams

2024-08-29

Table of contents

Preface	3
I Jaamsim Labs	4
1 Radiology Clinic	5
1.1 Experiments	5
1.2 Jaamsim Model	5
1.2.1 Creating Model Objects	5
1.2.2 Configuring Objects	8
1.3 Model Logic – Java	10
1.4 Model Output	16
1.5 Task	16
2 Summary	18
II Conceptual Models	19
3 Radiology Clinic	20
3.1 Data	20
3.2 Components	21
3.3 Activity Diagrams	24
3.4 Control Policies	25

Preface

These are the Labs for ENGSCI 355.

To learn more about Quarto books visit <https://quarto.org/docs/books>.

Part I

Jaamsim Labs

1 Radiology Clinic

In this lab you will be introduced to the basics of creating a simulation model using the discrete event simulation software Jaamsim and the HCCM module. To do this we will use the CT service of a radiology clinic as an example. At the clinic patients: arrive according to a known distribution 24/7; check in at reception, which takes a uniformly distributed amount of time; and then have a scan, the duration of which also follows a known distribution; and finally leave.

We want to use the simulation to determine the average time that patients spend in the clinic, between arriving and leaving. We want to compare this time to the time that patients would spend in the system if interarrival times and scan durations were always equal to the average of the distributions for all patients. Typically we would first formulate the simulation model by defining the objectives, benefits, conceptual model, and experiments. For the sake of brevity we will only cover the experiments. As the aim of the lab is to learn the basics of Jaamsim, the conceptual model is not given here, instead it is available separately in the file Radiology_Lab_1_CM.pdf.

1.1 Experiments

We will perform just one experiment, using distributions for the arrival, check in, and scan processes. We will use a Poisson distribution with $\lambda = 8/\text{hour}$ for the arrival process, a uniform distribution between 2 and 5 minutes for the check in durations, and a log-normal distribution where the underlying normal variable has a mean of -1.34 and standard deviation 0.29 for the scan durations. For the experiment we will run 50 replications that each last for 1 week.

1.2 Jaamsim Model

1.2.1 Creating Model Objects

Run Jaamsim by opening Eclipse and clicking the run button and select GUIFrame. The HCCM palette on the left hand side allows us to create Jaamsim objects that correspond to the components of our HCCM conceptual models. Based on the problem description and conceptual model we need three types of entities: patients, receptionists, and CT Machines. To create each of these expand the HCCM palette in the Model Builder window, select **ActiveEntity**, and dragging it into the View Window, see Figure 1.1. Then in the Object Selector window select **ActiveEntity1**, press F2, and rename it **PatientEntity**.

Repeat this process two more times and create **ActiveEntities** called **ReceptionistEntity** and **CTMachineEntity**.

An **ActiveEntity** object by itself does not create any entities in the simulation, it just acts as a prototype for entities. To create entities an **ArriveEvent** object is used, which simulates patients/receptionists/CTMachines arriving at the clinic. The **ArriveEvent** object creates a series of entities that are

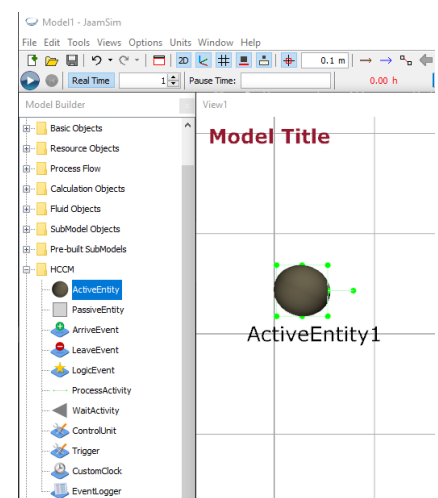


Figure 1.1: Screenshot of an **ActiveEntity**

Table 1.1: Arrival Distribution Inputs

Object	Keyword	Value
ArrivalDistribution	UnitType	TimeUnit
	RandomSeed	1
	Mean	0.125 h

passed to the next object in a process. The PrototypeEntity keyword identifies the entity to be copied. The rate at which entities are generated is determined by the InterArrivalTime and FirstArrivalTime keywords. Create three ArriveEvents called PatientArrival, ReceptionistArrival, and CTMachineArrival, and set the PrototypeEntity to be the related entity (patient, receptionist, CTMachine).

We also need to create objects that represent the entities leaving, called LeaveEvent, we will only create one for the patients, as we are assuming that the receptionist and CT machines are available 24/7 so they do not need to leave. Drag and drop a leave event into the simulation, rename it PatientLeave, and set the Participant to be the patient entity (under the HCGM tab).

The patients waiting for check in and scanning, and both the receptionist and CT machines waiting for tasks can be represented by WaitActivities, so create four WaitActivities and rename them WaitForCheckIn, WaitForScan, WaitForTaskReceptionist, and WaitForTaskCTMachine respectively, and once again set the Participant to the respective entity.

We can then represent the patient doing check in with the receptionist, and the patient being scanned by a CT machine as process activities. Create two process activities and rename them CheckIn, and Scan.

We also need to create objects to represent the probability distributions that the interarrival, check in, and scan times come from. Probability distributions can be represented in Jaamsim with distribution objects. If we examine the PatientArrival object we see two keywords FirstArrivalTime and InterArrivalTime which determine the rate that the entities are created. For a Poisson process with an average of 8 arrivals per hour the interarrival times can be modelled by an exponential distribution with mean 0.125 hours. We therefore go into the Probability Distributions palette in the Model Builder window and create an ExponentialDistribution object and name it ArrivalDistribution. First we set the UnitType keyword to be TimeUnit, then we set the mean of the distribution to 0.125 h. The UnitType tells Jaamsim what type of value we want the distribution object to create, in our case this is the time between arrivals in hours, which is a unit of time. Also make sure that the RandomSeed is 1, this determines the seed for the random number generator. Table 1.1 shows the keywords and values for the ArrivalDistribution object.

We need to repeat these steps for the check in and scan processes, which follow uniform and log-normal distributions respectively, so create a UniformDistribution object called CheckInDistribution and a LogNormalDistribution object called ScanDistribution. Then update the keywords of the distribution objects as follows in Table 1.2:

The final object we need at this stage is a Statistics object, to capture some output about the patients. This is found under the ProcessFlow palette, create a Statistics object and call it TimeInSystem.

At this point you should have the objects shown in Table 1.3 in your simulation.

Table 1.2: Check In and Scan Distributions

Object	Keyword	Value
CheckInDistribtuion	UnitType	TimeUnit
	RandomSeed	2
	MinValue	2 min
	MaxValue	5 min
ScanDistribution	UnitType	TimeUnit
	RandomSeed	3
	Scale	1 h
	NormalMean	-1.34
	NormalSD	0.29

Table 1.3: Model Objects

Object Type	Name
ActiveEntity	PatientEntity
ActiveEntity	ReceptionistEntity
ActiveEntity	CTMachineEntity
ArriveEvent	PatientArrival
ArriveEvent	ReceptionistArrival
ArriveEvent	CTMachineArrival
LeaveEvent	PatientLeave
WaitActivity	WaitForCheckIn
WaitActivity	WaitForScan
WaitActivity	WaitForTaskReceptionist
WaitActivity	WaitForTaskCTMachine
ProcessActivity	CheckIn
ProcessActivity	Scan
ExponentialDistribution	ArrivalDistribution
UniformDistribution	CheckInDistribution
LogNormalDistribution	ScanDistribution
Statistics	TimeInSystem

Once you have created all of these objects lay them out similarly to as shown in Figure 1.2.

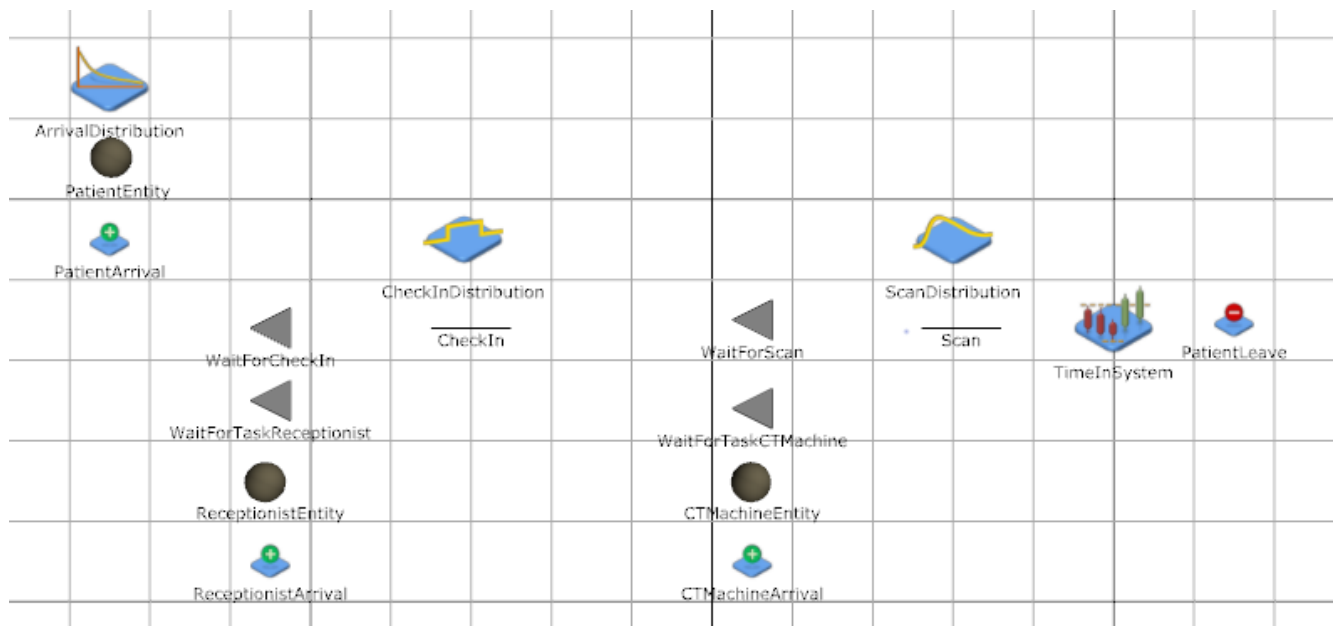


Figure 1.2: Screenshot of Simulation Model Layout

Create a new folder in the 'labs' folder called 'RC1' and save your simulation as 'radiology_lab.cfg' or something similar inside the new folder. Also take this opportunity to change the graphics of the PatientEntity, ReceptionistEntity and CTMachineEntity. Download the patient.png, receptionist.png, and ctscanner.png (icons made by Freepik from www.flaticon.com) files from Canvas and save them in the same folder as your simulation .cfg file. Then in Jaamsim right click on PatientEntity and select Change Graphics. Click on Import and navigate to your downloaded patient.png, import it (it may be called patient-model) and accept the change. Repeat the process for the receptionists, and CT scanners.

1.2.2 Configuring Objects

Now that we have created the objects we need, we need to set the options for the each of them, starting with the ArriveEvents. The PatientArrival should have both the first arrival time and inter arrival times set by the ArrivalDistribution object, use the PatientEntity as a prototype, and the NextAEJObject should be WaitForCheckIn. NextAEJObject stands for next activity/event/Jaamsim object and refers to the fact that the next place an entity goes could be a standard Jaamsim object or a custom HCCM activity or event. For the arrive events we set NextAEJObject to the object that represents the activity that is transitioned to at the end of the event state changes in the conceptual model. For the ReceptionistArrival and CTMachineArrival we need to: set the prototype entity; both MaxNumber and InitialNumber (1 for receptionist, 3 for CT Machine); and set the NextAEJObject to the respective wait activity.

Next we will set the options for the Process Activities (and Statistics) so that the routing/flow for the entities is correct. The Check In activity has both the Patient and Receptionist as participants so we set the Participant list to PatientEntity, ReceptionistEntity. The duration is determined by the check in distribution, so we just set the duration to be CheckInDistribution object. After Check In the Patient starts waiting for a scan and the receptionist goes back to waiting for a task, so we set the NextAEJList

Table 1.4: Arrival Event Parameters

Object	Tab	Keyword	Value
PatientArrival	Key Inputs	PrototypeEntity	PatientEntity
PatientArrival	Key Inputs	FirstArrivalTime	ArrivalDistribution
PatientArrival	Key Inputs	InterArrivalTime	ArrivalDistribution
PatientArrival	HCCM	NextAEJObject	WaitForCheckIn
ReceptionistArrival	Key Inputs	PrototypeEntity	ReceptionistEntity
ReceptionistArrival	Key Inputs	MaxNumber	1
ReceptionistArrival	Key Inputs	InitialNumber	1
ReceptionistArrival	HCCM	NextAEJObject	WaitForTaskReceptionist
CTMachineArrival	Key Inputs	PrototypeEntity	CTMachineEntity
CTMachineArrival	Key Inputs	MaxNumber	3
CTMachineArrival	Key Inputs	InitialNumber	3
CTMachineArrival	HCCM	NextAEJObject	WaitForTaskCTMachine

Table 1.5: Process Activity Parameters

Object	Tab	Keyword	Value
CheckIn	Key Inputs	Duration	CheckInDistribution
CheckIn	HCCM	ParticipantList	PatientEntity ReceptionistEntity
CheckIn	HCCM	NextAEJList	WaitForScan WaitForTaskReceptionist
Scan	Key Inputs	Duration	ScanDistribution
Scan	HCCM	ParticipantList	PatientEntity CTMachineEntity
Scan	HCCM	NextAEJList	TimeInSystem WaitForTaskCTMachine

to WaitForScan, WaitForTaskReceptionist. The Scan activity has both the Patient and CTMachine as participants and the duration is determined by the ScanDistribution object. After Scan the Patient should just leave, but we want to record some statistics first so we send it to TimeInSystem, and the CTMachine goes back to WaitForTaskCTMachine. For Process Activities the NextAEJList is similar to the NextAEJObject from the Arrive Events (which is similar to NextComponent), the difference is that a list of next objects is given, one for each of the participants in the activity. The participants are sent to the corresponding element of the list so it is important that the next activities are in the same order as the participants.

Note that when you click on the checkboxes in the popup menu for both ParticipantList and NextAEJList the items are added in alphabetical order, not the order you click them in. This is particularly important for the Scan activity as the CTMachineEntity comes before the PatientEntity alphabetically, but for the next activities TimeInSystem is before WaitForTaskCTMachine alphabetically so the two lists will not be in the same order.

The last object we need to configure before the simulation will run (it will run but it will not quite work correctly) is the TimeInSystem object. This is a Statistics object which collects a value from each Entity that passes through it and outputs the mean of the sampled values. We then need to finish the routing so that patients leave after going through the TimeInSystem, and tell the Statistics object which value to record as shown in Table 1.6, note that this refers to the Statistics object itself, obj refers to the entity that the Statistics object is currently processing, and TotalTime is an output on the entity that stores the total time that the entity has been in the simulation for.

Save your simulation again. If you run your simulation now you should see

Table 1.6: Collecting Statistics

Object	Keyword	Value
TimeInSystem	NextComponent	PatientLeave
	UnitType	TimeUnit
	SampleValue	this.obj.TotalTime

one receptionist arrive and wait, three CT machines arrive and wait, and patients arrive, and wait for check in. However nothing else will happen and all of the entities will simply be waiting, this is because we have not specified any logic to be triggered when the entities start waiting.

1.3 Model Logic – Java

In your eclipse project you should have a folder called ‘sim_custom’ under the Project Explorer on the left hand side in Eclipse. First right-click on this folder and select New → Package. Enter labs for the name of the package and click Finish.

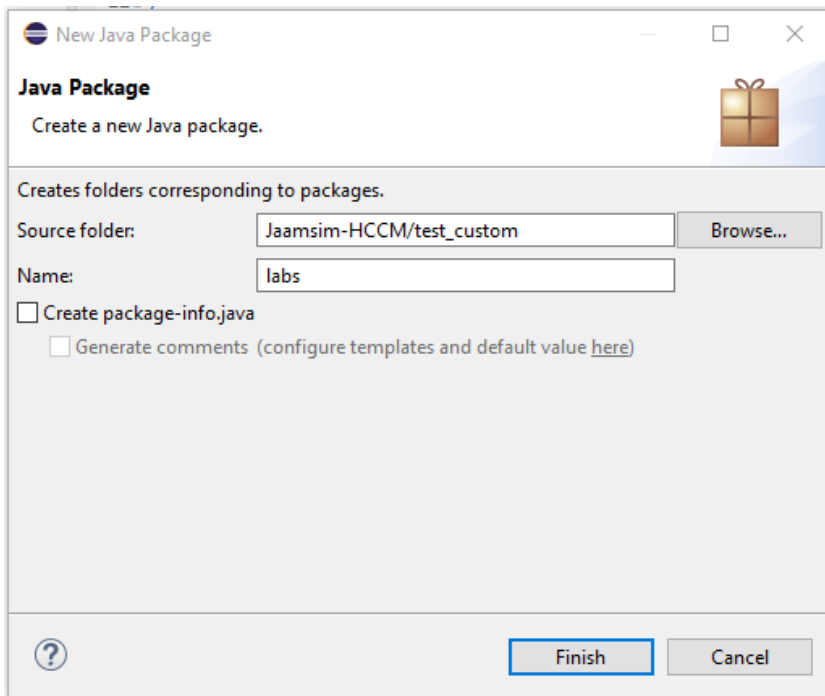


Figure 1.4: Second Step in Creating a New Package

Right click on the newly created labs package and select New → Class. Name the Class RadiologyControlUnit and enter hccm.controlunits.ControlUnit for the Superclass.

What this has done is created a new Java class, based off the ControlUnit class, which we will use to implement the logic required for the clinic. The final step required to make this new object available in the simulation is to add to the contents of the sim_custom.inc file that we put in sim → hccm → jaamsim → src → main → resources → resources → inputs. There should already be some code there from the previous lab, so you only need to add lines 3, 7, and 10. If you want to copy and paste this make sure the quotes are copied correctly and the return (arrow) on line 10 is removed.

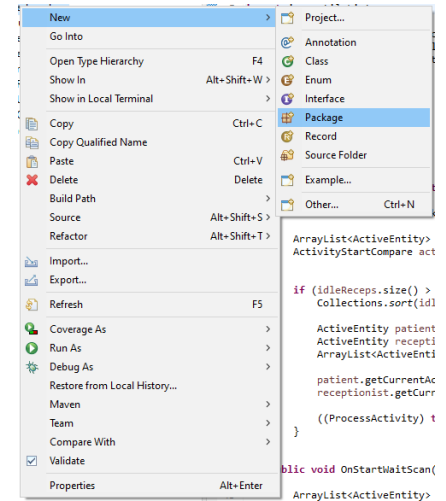


Figure 1.3: First Step in Creating a New Package

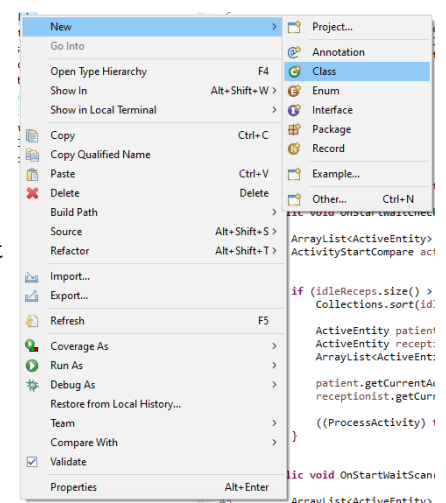


Figure 1.5: First Step in Creating a New Class

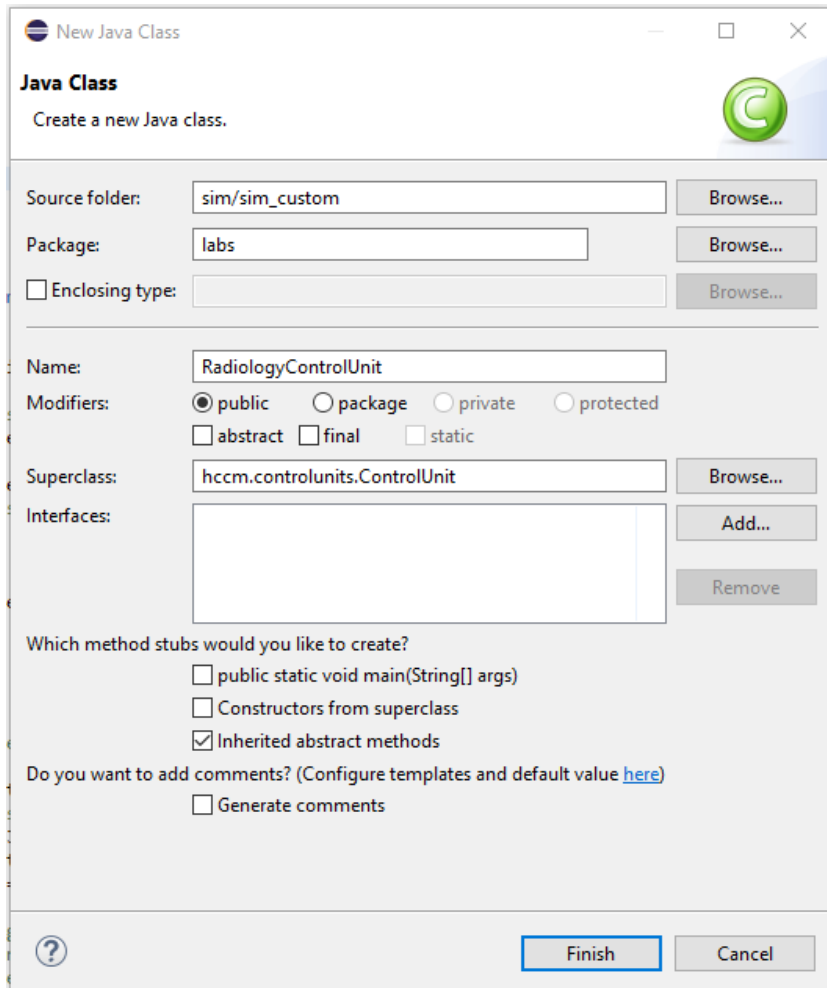


Figure 1.6: Second Step in Creating a New Class

Alternatively there is a new `sim_custom.inc` file on Canvas under Jaamsim Lab 1 that you can use directly.

```

1 Define ObjectType {
2     FIFOQControlUnit
3     RadiologyControlUnit
4 }
5
6 ControllerIconModel ImageFile { '<res>/images/Controller-256.png' } Transparent { TRUE }
7 AssembleIconModel ImageFile { '<res>/images/Assemble-256.png' } Transparent { TRUE }
8
9 FIFOQControlUnit JavaClass { ssq.FIFOQControlUnit } Palette { 'Single Server Queue' } DefaultDisplayMode
10 RadiologyControlUnit JavaClass { labs.RadiologyControlUnit } Palette { 'Custom Logic' } DefaultDisplayMode

```

Once you have updated the `sim_custom.inc` file, clean your project and restart Jaamsim. If everything is working correctly the `RadiologyControlUnit` object should now be available under the Custom Logic palette as shown in the screenshot below:

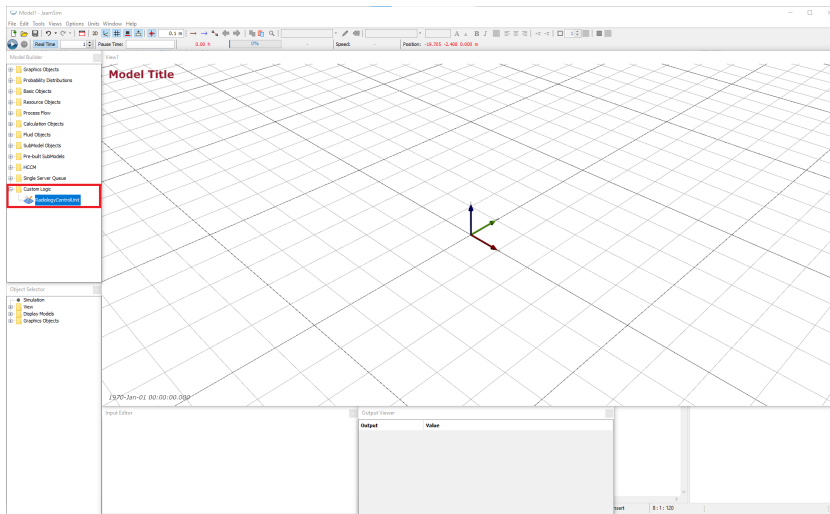


Figure 1.7: Screenshot of Control Unit Object

Once you have the new `RadiologyControlUnit` object available open your simulation and create one.

We now need to add the Java code to the new `RadiologyControlUnit` class to run the control policies. First add the following imports under the package declaration. **Note** These code snippets for this lab are provided in a separate file for you

```

1 package labs;
2 import java.util.ArrayList;
3 import java.util.Arrays;
4 import java.util.Collections;
5 import java.util.List;
6
7 import hccm.activities.ProcessActivity;
8 import hccm.controlunits.ControlUnit;
9 import hccm.entities.ActiveEntity;

```

Then, within the definition of the class we need to create four methods that represent the four control policies in the model. Each control policy is a public method of the class that does not return any value

(is void) and takes both a list of Active Entities, and the simulation time as inputs. We will use the same names for the methods as the control policies in the conceptual model: `OnStartWaitForCheckIn`, `OnStartWaitForScan`, `OnStartWaitForTaskReceptionist`, and `OnStartWaitForTaskCTMachine`. In the first of these, `OnStartWaitForCheckIn` we first need to get a list of the Receptionist Entities that are currently in the 'WaitForTaskReceptionist' activity, and we also create a comparator object that is used to sort a list of entities by when they started their current activity.

Once we have the list of idle receptionists we check whether it is not empty, and if it isn't proceed to sort it, select the first one, and transition the patient and receptionist to the check in activity.

```
1 public void OnStartWaitForCheckIn(List<ActiveEntity> ents, double simTime) {
2
3     ArrayList<ActiveEntity> idleReceps = this.getEntitiesInActivity("ReceptionistEntity",
4     ActivityStartCompare actSartComp = this.new ActivityStartCompare();
5
6     if (idleReceps.size() > 0) {
7         Collections.sort(idleReceps, actSartComp);
8
9         ActiveEntity patient = ents.get(0);
10        ActiveEntity receptionist = idleReceps.get(0);
11
12        transitionTo("CheckIn", patient, receptionist);
13    }
14 }
```

Similar methods are defined for the other control policies, with small changes based on the types of entities that are being checked, and the activity that is started. There are gaps that need to be filled in on lines 3, 24, and 42. In the first gap you need to create an array that contains all of the CT Machines that are currently idle. In the second, you need to select which of the patients that are currently waiting should do check in with the receptionist. In the third, you need to start the next activity with the patient and CT Machine. All of these have similar lines in the first method that you can use as a guide.

The final step needed to get this logic into the simulation is to define Triggers that initiate these methods and where/when they should be called. To do this create four Trigger objects, called `StartWaitCheckIn`, `StartWaitScan`, `StartWaitTaskReceptionist`, and `StartWaitTaskCTMachine` from the HCCM palette and set the `ControlUnit` and `ControlPolicy` for each one. The value of the `ControlPolicy` keyword needs to exactly match the name of the method you have defined in the java code.

Then update the parameters in the Wait Activities that these control policies should be triggered in:

Now if you save and run your simulation you should be able to see patients arriving, checking in, being scanned, and leaving. If you get an error saying that a method cannot be found on the control unit, first make sure that all of the `ControlPolicy` inputs exactly match the names of the methods in the control unit java file. Then try closing Jaamsim, cleaning your project, and restarting Jaamsim.

```

1 public void OnStartWaitForScan(List<ActiveEntity> ents, double simTime) {
2
3     // A //
4     ActivityStartCompare actSartComp = this.new ActivityStartCompare();
5
6     if (idleCTs.size() > 0) {
7         Collections.sort(idleCTs, actSartComp);
8
9         ActiveEntity patient = ents.get(0);
10        ActiveEntity ct = idleCTs.get(0);
11
12        transitionTo("Scan", patient, ct);
13    }
14 }
15
16 public void OnStartWaitForTaskReceptionist(List<ActiveEntity> ents, double simTime) {
17
18     ArrayList<ActiveEntity> waitPats = this.getEntitiesInActivity("PatientEntity", "WaitFo
19     ActivityStartCompare actSartComp = this.new ActivityStartCompare();
20
21     if (waitPats.size() > 0) {
22         Collections.sort(waitPats, actSartComp);
23
24         // B //
25         ActiveEntity receptionist = ents.get(0);
26
27         transitionTo("CheckIn", patient, receptionist);
28     }
29 }
30
31 public void OnStartWaitForTaskCTMachine(List<ActiveEntity> ents, double simTime) {
32
33     ArrayList<ActiveEntity> waitPats = this.getEntitiesInActivity("PatientEntity", "WaitFo
34     ActivityStartCompare actSartComp = this.new ActivityStartCompare();
35
36     if (waitPats.size() > 0) {
37         Collections.sort(waitPats, actSartComp);
38
39         ActiveEntity patient = waitPats.get(0);
40         ActiveEntity ct = ents.get(0);
41
42         // C //
43     }
44 }

```

Table 1.7: Trigger Parameters

Object	Tab	Keyword	Value
StartWaitCheckIn	HCCM	ControlUnit	RadiologyControlUnit1
StartWaitCheckIn	HCCM	ControlPolicy	OnStartWaitForCheckIn
StartWaitScan	HCCM	ControlUnit	RadiologyControlUnit1
StartWaitScan	HCCM	ControlPolicy	OnStartWaitForScan
StartWaitTaskReceptionist	HCCM	ControlUnit	RadiologyControlUnit1
StartWaitTaskReceptionist	HCCM	ControlPolicy	OnStartWaitForTaskReceptionist
StartWaitTaskCTMachine	HCCM	ControlUnit	RadiologyControlUnit1
StartWaitTaskCTMachine	HCCM	ControlPolicy	OnStartWaitForTaskCTMachine

Table 1.8: Wait Activity Parameters

Object	Tab	Keyword	Value
WaitForCheckIn	HCCM	StartTriggerList	StartWaitCheckIn
WaitForCheckIn	HCCM	StartTriggerChoice	1
WaitForScan	HCCM	StartTriggerList	StartWaitScan
WaitForScan	HCCM	StartTriggerChoice	1
WaitForTaskReceptionist	HCCM	StartTriggerList	StartWaitTaskReceptionist
WaitForTaskReceptionist	HCCM	StartTriggerChoice	1
WaitForTaskCTMachine	HCCM	StartTriggerList	StartWaitTaskCTMachine
WaitForTaskCTMachine	HCCM	StartTriggerChoice	1

Table 1.9: Simulation Parameters

Object	Tab	Keyword	Value
Simulation	Key Inputs	RunDuration	7 d
Simulation	Key Inputs	RunOutputList	{'[TimeInSystem].SampleAverage / 1[h]}'}
Simulation	Multiple Runs	NumberOfReplications	50
Simulation	Multiple Runs	PrintConfidenceIntervals	FALSE

Table 1.10: R Output

lower95CI	mean	upper95CI
0.442	0.449	0.457

Table 1.11: Task Output

lower95CI	mean	upper95CI
0.724	0.731	0.737

1.4 Model Output

To perform different experiments and multiple replications we make use of Jaamsim's MultipleRuns feature which can be found in the Simulation object at the top of the Object Selector window. Here we can use the NumberOfReplications to control how many replications are performed. We want to do 50 replications so we set NumberOfReplications to 50. We want each replication to run for one week, so we set RunDuration to 7d. To record outputs we can make use of the Simulation object's RunOutputList, which saves the final value of outputs at the end of each run. The scenario number, and the replication number are saved by default (by default PrintRunLabels and PrintReplications are TRUE), but we will calculate confidence intervals ourselves so we set PrintConfidenceIntervals to FALSE. Because ActiveEntities are removed from the simulation when they enter a LeaveEvent, we cannot get the total time that each patient spends in the clinic at the end of the run. This is why we created a Statistics object called TimeInSystem that records how long they have been in the system before they are destroyed. We can use the SampleAverage output of the TimeInSystem object in the Simulation's RunOutputList to output the mean time in system for each replication. **Note** The SampleAverage is divided by 1[h] to give a raw number in hours for later processing in R. Otherwise JaamSim writes an h to the data file.

Now if you save and run your simulation a file should be created called 'yourSimulationName.dat'. To speed up running the simulation you can turn off the option 'Real time', in the top left corner next to the play button.

With the model complete and the results recorded we can use R to analyse them. First download the R analysis file provided, then change the working directory and name of the .dat and .log files to match yours, then run the R file. The following table should be printed:

1.5 Task

Construct a 95% confidence interval for the average utilisation of the three CT machines in each experiment. You should get the following output:

Hint: there are many ways to do this. Have a look at the outputs provided on the wait activity `WaitForTaskCTMachine`, can you calculate the total time that the three CTMachines have spent waiting using these outputs?

2 Summary

In summary, this book has no content whatsoever.

Part II

Conceptual Models

3 Radiology Clinic

3.1 Data

Table 3.1: List of Global Variables

Name	Description	Initial Value
NextPatIdNum	The Id number that will be assigned to the next patient	1
NextReceptionistIdNum	The Id number that will be assigned to the next receptionist	1
NextCTMachineIdNum	The Id number that will be assigned to the next CT Machine	1
P	The set of all patients	\emptyset
R	The set of all receptionists	\emptyset
C	The set of all CT Machines	\emptyset

Table 3.2: List of Data Modules

Name	Source	Identification	Input	Output
PatientInterarrivalTime	Poisson Process	Parameter	Mean interarrival time	Sample from Distribution
NumReceptionists	Constant	Parameter	N/A	Value
NumCTMachines	Constant	Parameter	N/A	Value
CheckInTime	Uniform Distribution	Parameter	Min and max time	Sample from Distribution
ScanTime	Log-normal Distribution	Parameter	Mean and std. dev.	Sample from Distribution

3.2 Components

Table 3.3: List of Entities

Entity	Attributes
Patient	ID State StateTimes
Receptionist	ID State StateTimes
CT Machine	ID State StateTimes

Table 3.4: List of Transitions

No.	Participant	From Event	To Event
1	Patient	Arrive(P)	Wait for check in.Start
2	Patient	Wait for check in.End	Check in.Start
3	Patient	Check in.End	Wait for scan.Start
4	Patient	Wait for scan.End	Scan.Start
5	Patient	Scan.End	Leave(P)
6	Receptionist	Arrive(R)	Wait for task(R).Start
7	Receptionist	Wait for task(R).End	Check in.Start
8	Receptionist	Check in.End	Wait for task(R).Start
9	Receptionist	Wait for task(R).End	Leave(R)
10	CT Machine	Arrive(CT)	Wait for task(CT).Start
11	CT Machine	Wait for task(CT).End	Scan.Start
12	CT Machine	Scan.End	Wait for task(CT).Start
13	CT Machine	Wait for task(CT).End	Leave(CT)

Table 3.5: Activities

Activity	Participants	Event	Type	State Change	
Wait for check in	Patient (p)	Start	Scheduled	₁	TRIGGER OnStartWaitForCheckIn WITH p
		End	Controlled		
Check in	Patient (p), Receptionist (r)	Start	Controlled	₁	SCHEDULE Check in.End at TIME + CheckInTime()
		End	Scheduled	₁ ₂	TRANSITION 3 WITH p TRANSITION 8 WITH r
Wait for Scan	Patient (p)	Start	Scheduled		
		End	Controlled	₁	TRIGGER OnStartWaitForScan WITH p
Scan	Patient (p), CTMachine (c)	Start	Controlled	₁	SCHEDULE Scan.End at TIME + ScanTime()
		End	Scheduled	₁ ₂	TRANSITION 5 WITH p TRANSITION 12 WITH c
Wait for Task (R)	Receptionist (r)	Start	Scheduled	₁	TRIGGER OnStartWaitForTaskR WITH r
		End	Controlled		
Wait for Task (CT)	CTMachine (c)	Start	Scheduled	₁	TRIGGER OnStartWaitForTaskCT WITH c
		End	Controlled		

Table 3.6: Events

Activity	Participants	Type	State Change
Simulation Start	-	Scheduled	<ol style="list-style-type: none"> 1 SCHEDULE Arrival (R) at TIME 2 SCHEDULE Arrival (CT) at TIME 3 SCHEDULE Arrival (P) at TIME + PatientInterArrival()
Arrival (P)	Patient (p)	Scheduled	<ol style="list-style-type: none"> 1 p.ID = NextPatIDNum 2 p.Priority = PatientPriority() 3 NextPatIDNum = NextPatIDNum + 1 4 SCHEDULE Arrival (P) at TIME + PatientInterArrival() 5 TRANSITION 1 WITH p
Leave (P)	Patient (p)	Scheduled	<ol style="list-style-type: none"> 1 Calculate statistics for p
Arrival (R)	Receptionist (r)	Scheduled	<ol style="list-style-type: none"> 1 r.ID = NextReceptionistIDNum 2 NextReceptionistIDNum = NextReceptionistIDNum + 1 3 IF NextReceptionistIDNum <= NumReceptionists THEN 4 SCHEDULE Arrival (R) at TIME 5 END IF 6 TRANSITION 6 WITH r
Leave (R)	Receptionist (r)	Scheduled	<ol style="list-style-type: none"> 1 Calculate statistics for r
Arrival (CT)	CTMachine (c)	Scheduled	<ol style="list-style-type: none"> 1 c.ID = NextCTMachineIDNum 2 NextCTMachineIDNum = NextCTMachineIDNum + 1 3 IF NextCTMachineIDNum <= NumCTMachines THEN 4 SCHEDULE Arrival (CT) at TIME 5 END IF 6 TRANSITION 10 WITH c
Leave (P)	CTMachine (c)	Scheduled	<ol style="list-style-type: none"> 1 Calculate statistics for c

3.3 Activity Diagrams

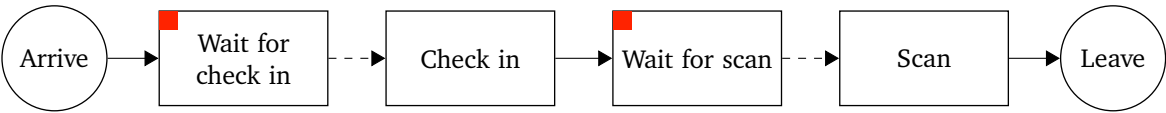


Figure 3.1: Patient Activity Diagram

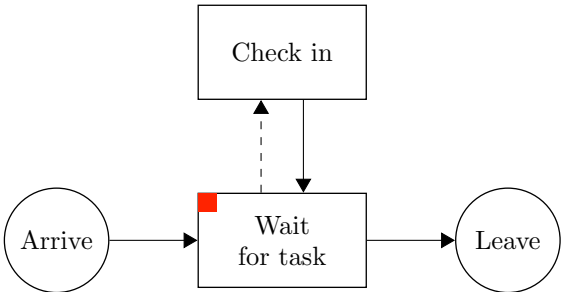


Figure 3.2: Receptionist Activity Diagram

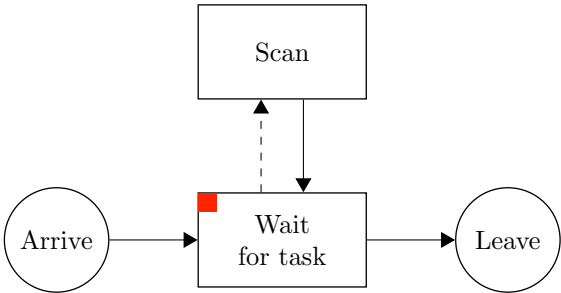


Figure 3.3: CT Activity Diagram

3.4 Control Policies

Table 3.7: OnStartWaitForCheckIn

Triggered by: Patient p	
1	recepts = {r FOR r IN R IF r.State = "Wait for task (R)"}
2	IF receipts != {} THEN
3	r_hat = argmin{r.CurrentStart FOR r in receipts}
4	TRANSITION 2 with p
5	TRANSITION 7 with r_hat
6	END IF

Table 3.8: OnStartWaitForScan

Triggered by: Patient p	
1	cts = {c FOR c IN C IF c.State = "Wait for task (C)"}
2	IF cts != {} THEN
3	c_hat = argmin{c.CurrentStart FOR c in cts}
4	TRANSITION 4 with p
5	TRANSITION 11 with c_hat
6	END IF

Table 3.9: OnStartWaitForTaskR

Triggered by: Receptionist r	
1	patients = {p FOR p IN P IF p.State = "Wait for Check In"}
2	IF patients != {} THEN
3	p_hat = argmin{p.CurrentStart FOR p in patients}
4	TRANSITION 2 with p_hat
5	TRANSITION 7 with r
6	END IF

Table 3.10: OnStartWaitForTaskCT

Triggered by: CTMachine c	
1	patients = {p FOR p IN P IF p.State = "Wait for Scan"}
2	IF patients != {} THEN
3	p_hat = argmin{p.CurrentStart FOR p in patients}
4	TRANSITION 4 with p_hat
5	TRANSITION 11 with c
6	END IF